

**GY-Hitec**

**1 x 120W LED Spot + 9 x 12W Wash**



**USER MANUAL**



**KEEP THIS MANUAL FOR FUTURE NEEDS**

Thank you for your patronage. We are confident that our excellent products and service can satisfy you. For your own safety, please read this user manual carefully before installing the device.

In order to install, operate, and maintain the lighting safety correctly. We suggest that the installation and operation should be done by the verified technician and follow the instruction strictly.



**CAUTION!** Keep this device away from rain and moisture!



**CAUTION!**

Unplug mains lead before opening the housing.

Every person involved with the installation, operation and maintenance of this device has to:

- be qualified
- follow carefully the instructions of this manual

## **1. INTRODUCTION**

Thank you for having chosen this professional moving head.

You will see you have acquired a powerful and versatile device.

Unpack the device. Inside the carton box you should find:

1. One XLR power cable
2. One user manual
3. One pc omega

Please check carefully that there is no damage caused by transportation. Should there be any, please consult your dealer and don't install this device.

## **2 Mounting and installation**

**2.1 Cautions:** for added protection mount the fixtures in areas outside walking paths ,seating areas,or in areas were the fixture might be reached by unauthorized personnel.

Before mounting the fixture to any surface ,make sure that the installation area can hold a minimum point load of 10 times the device's weight.

Fixture installation must always be secured with a secondary safety attachment ,such as an appropriate safety cable.

Never stand directly below the device when mounting ,removing ,or servicing the fixture, from a ceiling,or set on a flat level surface (see illustration below).Be sure this fixture is kept at least 0.5m (1.5ft) away from any flammable (decoration etc.)

Always use and install the supplied safety cable as a safe cable as safety measure to prevent accidental damage and /or injury in the event the clamp fails.

### **2.2 Mounting points:**


Overhead mounting requires extensive experience , including among others calculating working load limits, a fine knowledge of the

installation material being used ,and periodic safety inspection of all installation material and the fixture. If you lack these qualifications , Do not attempt the installation yourself ,improper installation can result in bodily injury.

Be sure to complete all rigging and installation procedures before connecting the main power cord to the appropriate wall outlet.

### **2.3 Clamp mounting :**

The LED moving head provides a unique mounting bracket assembly that integrates the bottom of the base, the included 'omega bracket' and the safety cable rigging point in one unit (see the illustration below).When mounting this fixture to truss be sure to sere to secure an appropriately rated clamp to the included omega bracket using a M10 screw fitted through the center hole of the 'omega bracket'.As an added safety measure be sure to attached at least one properly rated safety cable to the fixture using on of the safety cable rigging point integrated in the

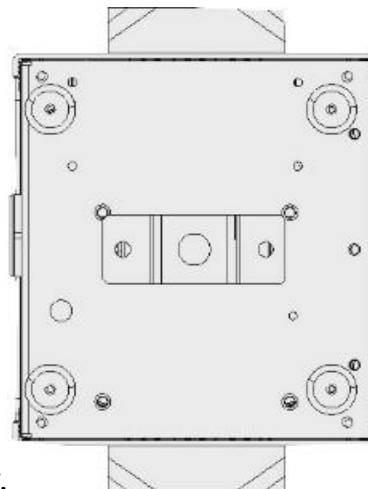

base assembly.


## 2.4 DMX-512 control connection

Connect the provided XLR cable to the female 3-pin XLR output of your controller and the other side to the male 3-pin XLR input of the moving head. You can chain multiple Moving head together through serial linking. The cable needed should be two core, screened cable with XLR input and output connectors. Please refer to the diagram below.



## 2.4 DMX-512 connection with DMX terminator

For installations where the DMX cable has to run a long distance or is in an electrically noisy environment, such as in a discotheque, it is recommended to use a DMX terminator. This helps in preventing corruption of the digital control signal by electrical noise. The DMX terminator is simply an XLR plug with a 120 resistor connected between pins 2 and 3, which is then plugged into the output XLR socket of the last fixture in the chain. Please see illustrations below.

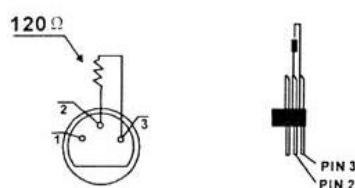

### 3 TECHNICAL PARAMETERS

POWER SUPPLIE

Input power:AC100-240V 50/60 Hz

Power consumption :245W

LED Source: 120W white + 9\*12W RGBWA+UV 6in1 LEDs

Beam angle: 11°(spot)/25°(Wash)

Lamp life : 5000 hours lamp lifespan and low consumption

16/23 DMX channels

Color wheel: 7 colors+white

Gobo wheel: 7 gobos+open

Prism: 3 facet rotating prism

Focus: Electronic linear focus

Movement :pan 540 degree , tilt 270 degree

Control mode:DMX, Auto, Sound, Master/Slave

Display:LCD display

N.W.:9.8KG

G.W.:11.6KG

Packing Size:48\*36\*36cm(1pcs/ctn)

### 4 :MENU FUNCTION

DMX Address	001~512			
Operating Mode	DMX 23 Ch			
	DMX 16 Ch			
	Auto	Perform Mode 1		
		Perform Mode 2		
		Perform Mode 3		
		Perform Mode 4		
		Perform Mode 5		
		Perform Mode 6		
		Perform Mode 7		
		Perform Mode 8		
	Sound			
	Master Auto	Perform Mode 1		
		Perform Mode 2		
Perform Mode 3				

		Perform Mode 4	
		Perform Mode 5	
		Perform Mode 6	
		Perform Mode 7	
		Perform Mode 8	
Master Sound			
Slave			
Language Setting	简体中文		
	English		
Advanced Setting	Pan Reverse		
	Tilt Reverse		
	Display Reverse		
	Reset Motor		
	Factory Reset		
	Home Position	Password	Code =018
		Pan	
		Tilt	
		Dimmer	
		Color	
		Rotation Gobo	
		Focus	
		Red	
		Green	
		Blue	
		White	
	Amber		
	Purple		
	Mic Sensitive	= 000	
System Info	Current Time		
	Total Time		
	Current Mode		
	Temperature		
	Software Version		
Manual Control	Pan		
	Tilt		
	XY Speed		
	Dimmer		
	Strobe		
	Color		

	Rotation Gobo		
	Rotation Gobo Wheel		
	Focus		
	Prism		
	Wash Dimmer		
	Wash Strobe		
	Red		
	Green		
	Blue		
	White		
	Amber		
	Purple		

## 5:Function Mode

### 5.1 DMX address setting

With this function, you can adjust the desired DMX-address via the Control Board. Select via the encoder.

Press the encoder, adjust the DMX address by turning the encoder.

Press the encoder to confirm.

Press the Mode/Esc-button in order return to the main menu.

Set DMX address

Display the DMX 512 value of each channel

With this function you can display the DMX 512 value of each channel. The display automatically

shows the channel with a value changing.

### 5.2 Run Mode

The LED moving head have 16CH and 23 CH, can receive the International DMX signal.

In the **【Run】** mode, you can chose **【Master】** mode [ Sound Control ]

[Master Auto Run ] [Master Sound Control ] and **【Slave】** mode.

### 5.3 Language Setting

With this function, you can choose the Language between English and Chinese.

### 5.4 Advanced Set up

Pan Reverse

With this function you can reverse the Pan-movement.

Tilt Reverse

With this function you can reverse the Tilt 1-movement.

Display Reverse

With this function you can reverse the Tilt 2-movement.

Reset

With this function, you can reset the device via the Control Board.You can select the



different reset function by turning the encoder.

#### Factory Reset

With this function, you can select restore factory set for ON or OFF, the default is OFF.

#### 5.5 System State

With this function, you can know the On Time ,Accumulative Time, Current Run Mode ,Temperature and Software Version.

#### 5.6 Manual Control

With this function ,you can adjust the pan and tilt and the move speed, also adjust the dimmer ,strobe and color.

## 6: DMX CHANNELS

### 6.1 16 channel definition table

<i>Channel</i>	<i>DMX Value</i>	<i>Function</i>
1	000 - 255	X
2	000 - 255	Y
3	000-255	Dimmer(0-100%)
4	000-004	Shutter closed
	005-250	Strobe effect slow to fast
	251-255	Shutter open
5	000-004	Open(White)
	005-013	White/Color1
	014-022	Color1
	023-031	Color1/Color2
	032-040	Color2
	041-049	Color2/Color3
	050-058	Color3
	059-067	Color3/Color4
	068-076	Color4
	077-085	Color4/Color5
	086-094	Color5
	095-103	Color5/Color6
	104-112	Color6
	113-121	Color6/Color7
	122-130	Color7
131-139	Open(White)	
140-195	Forward rainbow effect from fast to slow	

	196-199	<i>Rotation stop</i>
	200-255	<i>Backward rainbow effect from slow to fast</i>
6	000-007	<i>Open(White)</i>
	008-028	<i>Gobo1</i>
	029-049	<i>Gobo2</i>
	050-070	<i>Gobo3</i>
	071-091	<i>Gobo4</i>
	092-112	<i>Gobo5</i>
	113-133	<i>Gobo6</i>
	134-194	<i>Forward rainbow effect from fast to slow</i>
	195-255	<i>Backward rainbow effect from slow to fast</i>
7	000-009	<i>Stop</i>
	010-129	<i>Forward Gobo Rotation from fast to slow</i>
	130-134	<i>Stop</i>
	135-255	<i>Backward Gobo Rotation from slow to fast</i>
8	000-255	<i>Focus</i>
9	000-007	<i>Open(White)</i>
	008-134	<i>Prism</i>
	135-255	<i>Forward Prism Rotation from slow to fast</i>
10	000-004	<i>Wash Shutter closed</i>
	005-250	<i>Wash Strobe effect slow to fast</i>
	251-255	<i>Wash Shutter open</i>
11	000-255	<i>Red</i>
12	000-255	<i>Green</i>
13	000-255	<i>Blue</i>
14	000-255	<i>White</i>
15	000-255	<i>Amber</i>
16	000-255	<i>Purple</i>

## 6.2 23 channel definition table

Channel	DMX Value	Function
1	000 - 255	X
2	000 - 255	X-Fine
3	000 - 255	Y
4	000-255	Y-Fine
5	000 - 255	XY SPEED
6	000-255	Dimmer(0-100%)
7	000-004	Shutter closed

	005-250	Strobe effect slow to fast
	251-255	Shutter open
8	000-004	Open(White)
	005-013	White/Color1
	014-022	Color1
	023-031	Color1/Color2
	032-040	Color2
	041-049	Color2/Color3
	050-058	Color3
	059-067	Color3/Color4
	068-076	Color4
	077-085	Color4/Color5
	086-094	Color5
	095-103	Color5/Color6
	104-112	Color6
	113-121	Color6/Color7
	122-130	Color7
	131-139	Open(White)
	140-195	Forward rainbow effect from fast to slow
	196-199	Rotation stop
200-255	Backward rainbow effect from slow to fast	
9	000-007	Open(White)
	008-028	Gobo1
	029-049	Gobo2
	050-070	Gobo3
	071-091	Gobo4
	092-112	Gobo5
	113-133	Gobo6
	134-194	Forward rainbow effect from fast to slow
	195-255	Backward rainbow effect from slow to fast
10	000-009	Stop
	010-129	Forward Gobo Rotation from fast to slow
	130-134	Stop
	135-255	Backward Gobo Rotation from slow to fast
11	000-255	Focus
12	000-007	Open(White)
	008-134	Prism
	135-255	Forward Prism Rotation from slow to fast
13	000-255	Wash Dimmer(0-100%)

14	000-004	Wash Shutter closed
	005-250	Wash Strobe effect slow to fast
	251-255	Wash Shutter open
15	000-255	Red
16	000-255	Green
17	000-255	Blue
18	000-255	White
19	000-255	Amber
20	000-255	Purple
21	000-007	Empty
	008-047	Auto Play 1
	048-087	Auto Play 2
	088-127	Auto Play 3
	128-167	Auto Play 4
	168-207	Auto Play 5
	208-247	Auto Play 6
248-255	Color Gobo Sound Control	
22	000-007	Empty
	008-032	X/Y auto run 1
	033-058	X/Y auto run 2
	059-084	X/Y auto run 3
	085-110	X/Y auto run 4
	111-136	X/Y auto run 5
	137-162	X/Y auto run 6
	163-188	X/Y auto run 7
	189-214	X/Y auto run 8
	215-240	X/Y auto run 9
	241-255	X/Y Sound Control
23	250-255	RESET(10S)